

MATCHLESS SPINNING WHEEL


REAR BEARING REPLACEMENT

REMOVE THE REAR BEARING

1. Remove the flyer assembly, bobbin, and whorl.
2. Remove the whorl knob and extra whorl from the rear of the bearing housing.
3. Unscrew the tension knob to release the bearing housing. Set the old bearing housing aside..

INSTALL THE NEW BEARING

1. Remove the tape and hold the spring pin in with your fingers.
2. Slip the bearing housing into place in the spinning wheel, with the flyer shaft bearing facing the front of the wheel.
3. Screw the tension knob into the bearing housing.
4. Re-install the flyer assembly, bobbin and whorl.
5. Re-attach the extra whorl and whorl knob on the rear of the bearing housing.

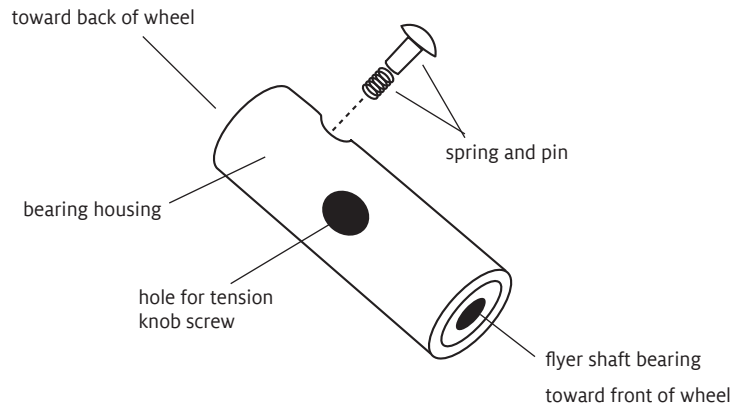

Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 f. 303.447.9273

© 2011 Schacht Spindle Company, Inc.

10.11