

INSTALLING APRON BARS

FOR CHERRY STANDARD FLOOR LOOMS & WOLF LOOMS

Note: These instructions replace those in the assembly manual.

For **each beam**, you will use:

- 1X long piece of Texsolv cord
- 1X 1/4" dowel
- 1X apron bar

Install one cord on each beam as follows:

1. Insert an end of the 1/4" dowel through the first full loop from the end of the Texsolv cord (Figure 1).
2. Thread the free end of the cord through the outermost hole on one end of the warp beam—an unbent paper clip will help here. Pull the cord through the hole until the cord and the dowel are snug against the warp beam (Figure 2).
3. Pass the cord around the apron bar, leaving about 30" between the warp beam and the apron bar.
4. Bring the cord back to the warp beam and insert it in the return direction through the next hole in the beam. Loop the cord around the dowel and thread it back through the same hole. Continue threading the cord around the apron rod and through

LOOM	APRON BAR LOOPS
Wolf Pup	3
Baby Wolf	4
Mighty Wolf/36" Standard	6
45" Standard	8

the beam in this manner until you reach the end of the beam.

5. Thread the cord into the last hole on the beam and insert the other end of the 1/4" dowel into the second loop from the end of the cord.

Note: Follow the same steps to install an apron bar on a cherry double back beam.

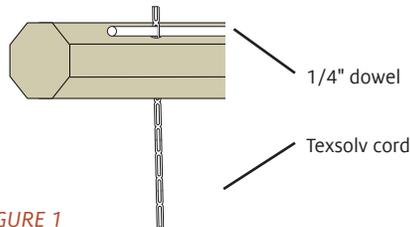


FIGURE 1

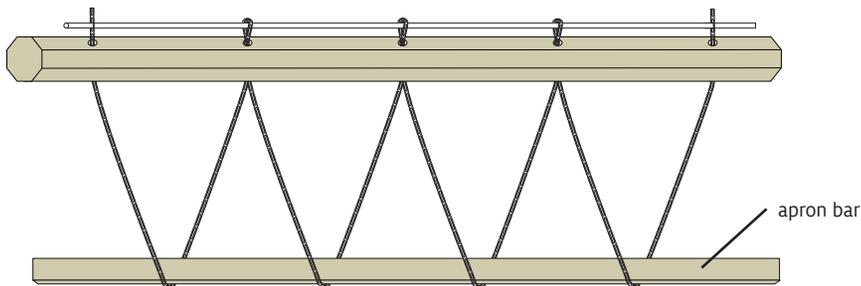


FIGURE 2

INSTALLING APRON BARS

FOR MAPLE STANDARD FLOOR LOOMS & WOLF LOOMS

1. Install one cord in each hole in the cloth and warp beams. Insert an end of a cord through a hole in the beam and pull the cord through. Then insert the other end through the second hole in the end of the cord that you just put through the beam. Pull firmly on the cord to tighten (Figure 3A). Repeat across the cloth beam and the warp beam.

LOOM	APRON CORDS
Wolf Pup	4 holes per beam
Baby Wolf	5 holes per beam
Mighty Wolf/36" Standard	7 holes per beam
45" Standard	9 holes per beam

2. To attach the apron bar to the apron cords, take a pinch of the cord about 4" from the end (Figure 3B). Insert the pinched cord through the second hole in the cord. Pull on the pinched cord until a new loop forms that is large enough for the apron bar to slip through (Figure 3C). Slide the apron bar through the loop (Figure 3D) and pull tight. Repeat until all cords are attached to the apron bar. Attach the other apron bar to its beam in the same way.

Note: Follow the same steps to install an apron bar on a maple double back beam.

Visit [youtube.com/user/schachtspindle](https://www.youtube.com/user/schachtspindle) for a video demonstrating these steps.

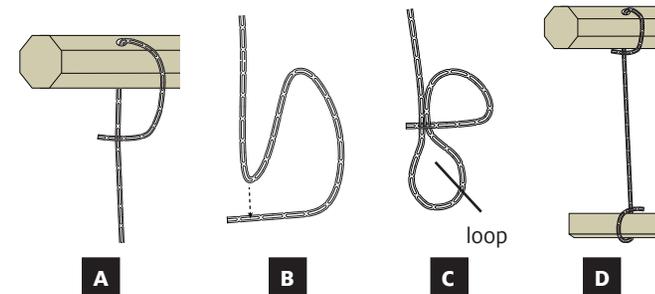


FIGURE 3: INSTALLING APRON CORDS



Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 f. 303.447.9273

© 2020 Schacht Spindle Company, Inc.



Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 f. 303.447.9273

© 2020 Schacht Spindle Company, Inc.