

# INSTALLING APRON BARS

## FOR CHERRY STANDARD FLOOR LOOMS & WOLF LOOMS

**Note: These instructions replace those in the assembly manual.**

You will use for each beam:  
 One long piece of Texsolv cord  
 One 1/4" dowel  
 One apron bar

Begin with the warp beam, as follows:

1. Insert an end of the 1/4" dowel through the second loop from the end of the Texsolv cord (Figure 1).
2. Thread the free end of the cord through the outermost hole on one end of the warp beam—an unbent paper clip will help here. Pull the cord through the hole until the cord and the dowel are snug against the warp beam (Figure 2).

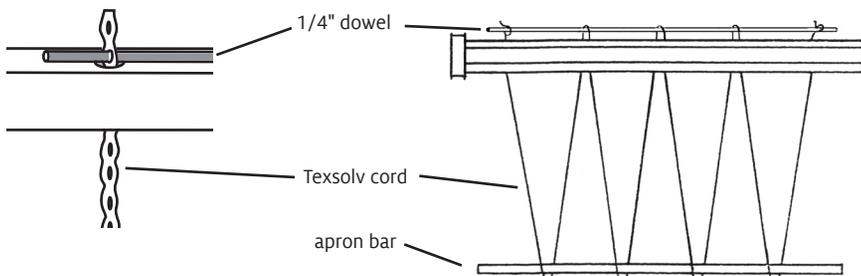


FIGURE 1

FIGURE 2

LOOM	APRON BAR LOOPS
Wolf Pup	3
Baby Wolf	4
Mighty Wolf/36" Standard	6
45" Standard	8

# INSTALLING APRON BARS

## FOR CHERRY STANDARD FLOOR LOOMS & WOLF LOOMS

**Note: These instructions replace those in the assembly manual.**

You will use for each beam:  
 One long piece of Texsolv cord  
 One 1/4" dowel  
 One apron bar

Begin with the warp beam, as follows:

1. Insert an end of the 1/4" dowel through the second loop from the end of the Texsolv cord (Figure 1).
2. Thread the free end of the cord through the outermost hole on one end of the warp beam—an unbent paper clip will help here. Pull the cord through the hole until the cord and the dowel are snug against the warp beam (Figure 2).

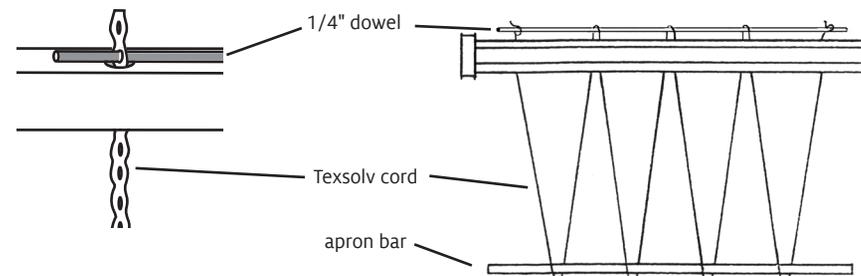


FIGURE 1

FIGURE 2

LOOM	APRON BAR LOOPS
Wolf Pup	3
Baby Wolf	4
Mighty Wolf/36" Standard	6
45" Standard	8



Find out more at [schachtspindle.com](http://schachtspindle.com)  
 Schacht Spindle Company 6101 Ben Place Boulder, CO 80301  
 p. 303.442.3212 f. 303.447.9273

© 2018 Schacht Spindle Company, Inc.

09.18



Find out more at [schachtspindle.com](http://schachtspindle.com)  
 Schacht Spindle Company 6101 Ben Place Boulder, CO 80301  
 p. 303.442.3212 f. 303.447.9273

© 2018 Schacht Spindle Company, Inc.

09.18