

INSTALLING APRON BARS

FOR CHERRY STANDARD FLOOR LOOMS & WOLF LOOMS

Note: These instructions replace those in the loom assembly manual.

For each beam, you will use:

- 1X long piece of Texsolv cord
- 1X 1/4" dowel
- 1X apron bar

Install one cord on each beam as follows:

1. Insert an end of the 1/4" dowel through the first full loop from the end of the Texsolv cord (Figure 1).
2. Thread the free end of the cord through the outermost hole on one end of the warp beam—an unbent paper clip will help here. Pull the cord through the hole until the cord and the dowel are snug against the warp beam (Figure 2).
3. Pass the cord around the apron bar, leaving about 30" between the warp beam and the apron bar.
4. Bring the cord back to the warp beam and insert it in the return direction through the next hole in the beam. Loop the cord around the dowel and thread it back through the same hole. Continue threading the cord around the apron rod and through the beam in this manner until you reach the end of the beam.
5. Thread the cord into the last hole on the beam and insert the other end of the 1/4" dowel into the second loop from the end of the cord.

LOOM	APRON BAR LOOPS
Wolf Pup	3
Baby Wolf	4
Mighty Wolf/36" Standard	6
45" Standard	8

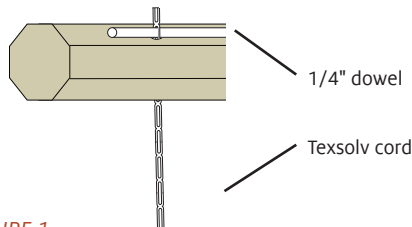


FIGURE 1

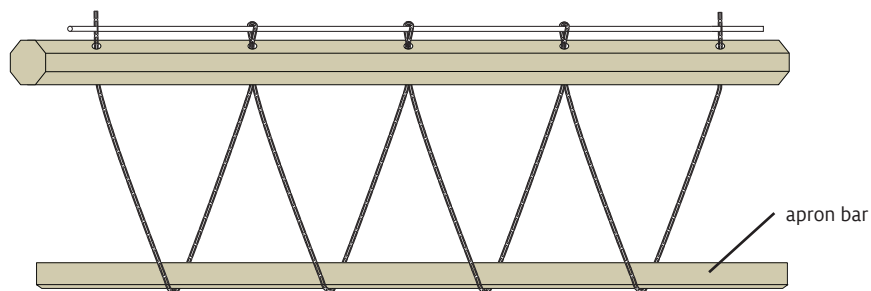


FIGURE 2



Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 f. 303.447.9273

© 2020 Schacht Spindle Company, Inc.